

 
INSTALLATION INSTRUCTIONS FOR EMERGENCY LIGHTING

IMPORTANT SAFEGUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
2. Do not use outdoors.
3. Do not mount near gas or electric heaters.
4. Do not let power supply cords touch hot surfaces.
5. Use caution when servicing batteries. Avoid possible shorting.
6. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
7. The use of accessory equipment is not recommended by the manufacturer as it may cause an unsafe condition.
8. Do not use this equipment for other than intended use.
9. Before wiring to power supply and during servicing or relamping, turn off AC power at fuse or circuit breaker.
10. Disconnect AC power and unplug battery before servicing.
11. When relamping, only use lamps specified in the fixture.
12. Battery in this unit may not be fully charged. After electricity is hooked up to unit, let the battery charge up for at least 24hrs, then normal operation of this unit should take effect.
13. All Servicing should be performed by qualified personnel.

SAVE THESE INSTRUCTIONS

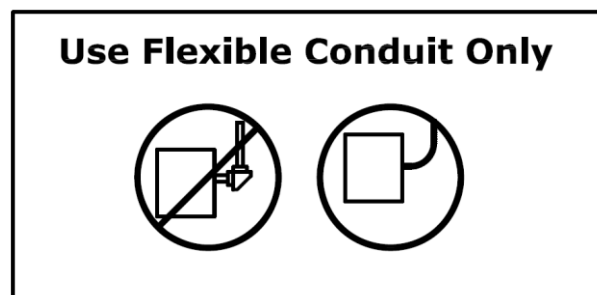

INSTALLATION INSTRUCTIONS

BACK MOUNTING (Max. mounting height is 7.3ft.)

1. Remove 3/8" hole cover in the center of back plate. (Recommended) Drill 1/4" holes into oblong holes on back plate that correspond to junction box being used.
2. Feed lamp leads through center hole and make proper connections. Using 120VAC, connect black wire, using 277VAC, connect orange wire to the building utility.
3. Cap off unused wire. In all cases, use standard wire nut in connection to leads.
4. Feed excess wire into junction box and secure back plate to junction box.
5. Snap in arrows EXIT panel as required, storing unused arrows in a safe place. Snap supplied cover into ceiling and side mounting holes. Then snap light lead housing top first and then bottom.

SIDE MOUNTING


1. Attach crossbar to junction box.
2. Open light head housing, then feed lamp leads through center hole, making sure to secure wire into wire guides found at the edges of the sign. Assemble light head housing.
3. Attach sign to canopy by inserting canopy into sign at an angle, then twist to secure.
4. Feed lamp leads through center hole and make proper connections. Using 120VAC, connect black wire, using 277VAC, connect orange wire to the building utility.
5. Cap off unused wire. In all cases, use standard wire nut in connection to leads.
6. Push excess wire into junction box and secure back plate to junction box. Then align holes in canopy with those in crossbar Using screws and washers supplied, tighten canopy to crossbar so that canopy is securely fastened and tight against wall.
7. Snap in arrows to EXIT panel as required, storing unused arrows in a safe place. Snap supplied covers into ceiling mounting hole. Then snap EXIT panel to housing top first and then bottom.

CEILING MOUNTING

1. Attach crossbar to junction box.
2. Feed lamp leads through top hole, making sure to secure wire into wire guides found at the edges of the sign.
3. Attach sign to canopy by inserting canopy into sign at an angle, then twist to secure.
4. Feed lamp leads through center hole and make proper connections. Using 120VAC, connect black wire, using 277VAC, connect orange wire to the building utility.
5. Cap off unused wire. In all cases, use standard wire nut in connection to leads.
6. Push excess wire into junction box and then align holes in canopy with those in crossbar. Using screws and washers supplied, tighten canopy to crossbar so that canopy is securely fastened and tight against ceiling.
7. Snap in arrows to EXIT panel as required, storing unused arrows in a safe place. Snap covers to side mounting hole. Then snap light head housing top first and then bottom.

INSTALLATION INSTRUCTIONS (1)

 
BACK MOUNTING

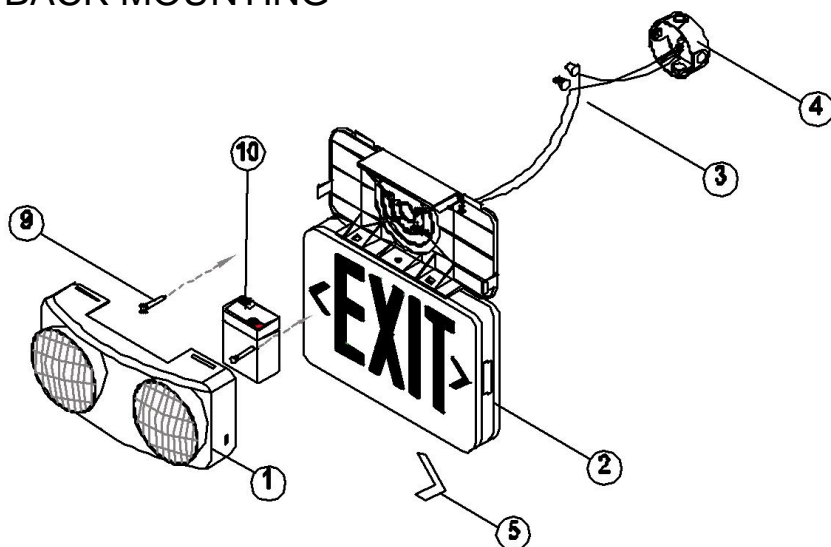

PARTS DESCRIPTION

- 1) Light Head Housing
- 2) EXIT Housing
- 3) Wire Nuts
- 4) Junction Box (Building Utility)
- 5) Snap-in Directional Arrow
- 6) Canopy Screws
- 7) Canopy
- 8) Cross Bar
- 9) Cross Bar Screw (not provided)
- 10) Battery

 SIDE MOUNTING

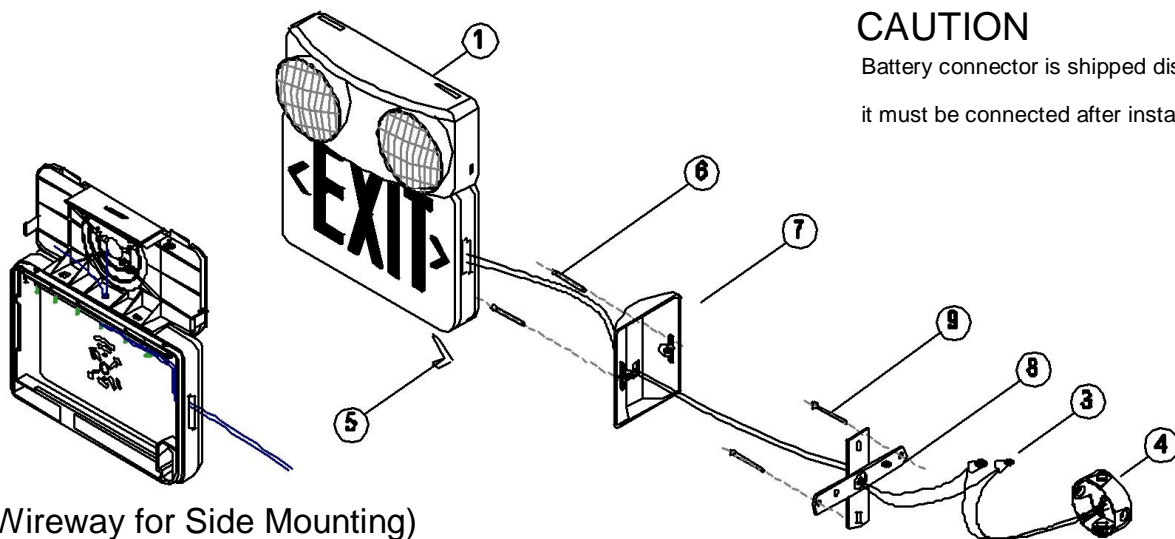


(Wireway for Side Mounting)


CAUTION

Battery connector is shipped disconnected
it must be connected after installation.

 CEILING MOUNTING

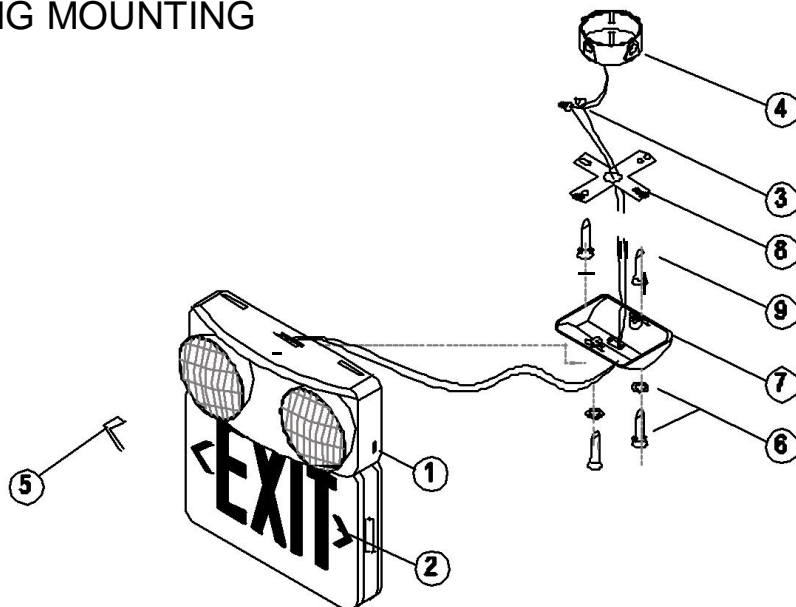


WIRING

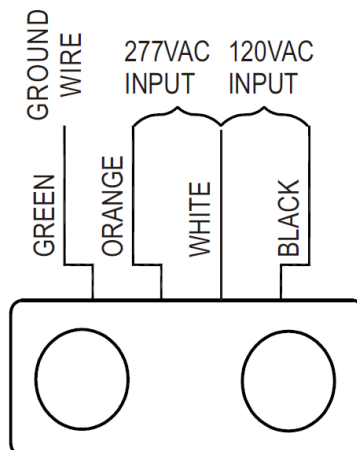 

INSTALLATION INSTRUCTIONS (2)

ASSEMBLING: CANOPY + HOUSING

 Insert canopy into housing at a 20-degree angle and twist.
Quick snap is now locked firmly.

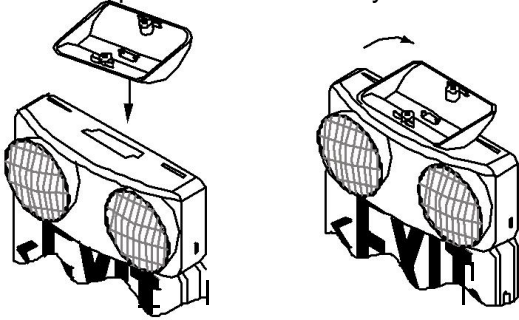


CAUTION

Trying to remove canopy after it is locked in place may cause damage.



OPENNING LIGHT HEAD HOUSING

 When opening light head, please insert screw driver into the slot at side, then push smoothly.

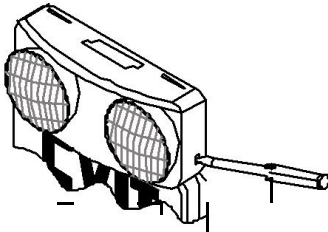

OPENNING EXIT PANEL

  When opening EXIT panel, please insert screw driver into the slots at the bottom. Then push and down smoothly.

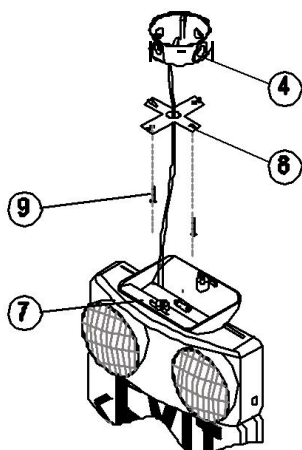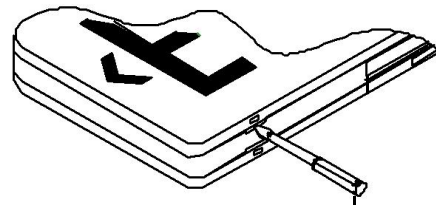

PARTS DESCRIPTION

- 4) Junction Box (Building Utility)
- 7) Canopy
- 8) Cross Bar
- 9) Cross Bar Screws (not provided)